

# VIDEOCADE 2003 RED BARON / PANZER ATTACK OPERATING INSTRUCTIONS

## RED BARON (2 players)

Insert Videcade 2003 into your Bally Professional Arcade and press the Reset button to get the game selection displayed on your television screen.

Press (1) on the keypad to play RED BARON. The Bally Professional Arcade will ask you to:

### "ENTER GAME TIME"

Using the keypad:

Enter	(9) (=)	Play 9 seconds
Enter	(9) (9) (=)	Play 99 seconds
Enter	(9) (9) (9)	Play 9 min. and 99 seconds

RED BARON is a two player game so you will be using hand controls: #1 (left side) and #2 (right side).

## HAND CONTROLS

Joy Stick . . . Player #1: Pull back to go counter-clockwise,  
push forward to go clockwise.  
Player #2: Pull back to go clockwise, push forward to go counter-clockwise.

Knob . . . . . Controls speed

Trigger . . . . . Shoots

## PANZER ATTACK (2 to 4 players)

Press (2) on the keypad to play PANZER ATTACK. The Professional Arcade will ask you to:

### "ENTER # OF PLAYERS" (Press 2, 3 or 4)

The Professional Arcade will then ask you to:

### "ENTER # OF GAMES"

When you play less than 10 games you must enter (=) to start play.


Each player's tank and score is shown at the top of the television screen, left to right. They are players #1 through #4, respectively.

### HAND CONTROLS


Joy Stick . . . Push — FORWARD  
Pull — BACKWARD  
Push Right — turn CLOCKWISE  
Push Left — turn COUNTER-CLOCKWISE  
Knob . . . . . No function  
Trigger . . . . . Shoots

MANUFACTURED BY:  
Bally Consumer Products Division  
Bally Manufacturing Corporation  
10750 W. Grand Avenue  
Franklin Park, IL 60131

# Bally<sup>®</sup> PROFESSIONAL Videocade<sup>™</sup> 2003

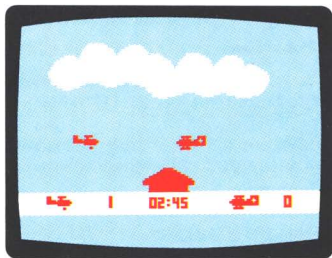

RED BARON

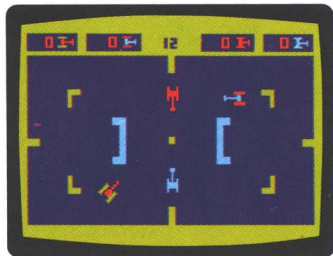

PANZER ATTACK